


NO LIMIT


QUALITY HOT ROD PARTS
&
ENGINEERING

VOLARE MOTOR MOUNT

1. Swing the motor and transmission into place. We assume that you are using one of our offset transmission mounts PT# M-161 (1" to the right). Bolt the transmission to the transmission mount and set the crossmember on top of the rails.
2. Now, position the motor where you want it. 1" offset at the crank, and try to get the carb base level.
3. Fit the passenger side mount first. It should fit to the boxing plate. Tack weld it into place.

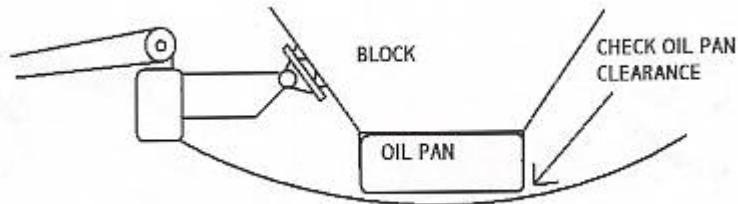

4. Next, fit the driver's side mounts -4 pieces. Put the "tube" through the rubber mount. Fit the outside plate. Bend fit to the outside of the tube.

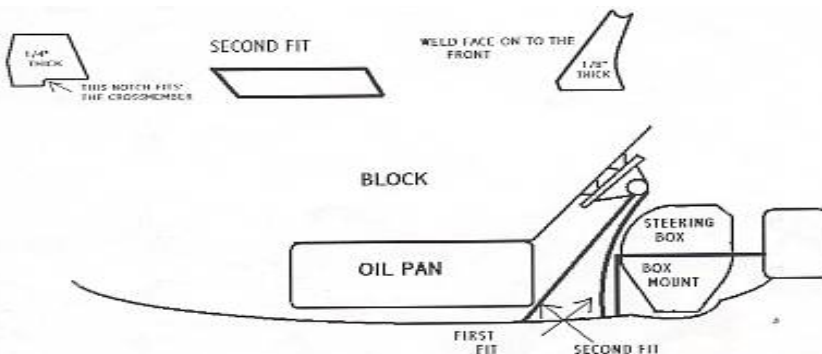

REMOVE THE MOTOR & WELD COMPLETELY!