


NO LIMIT

QUALITY HOT ROD PARTS
&
ENGINEERING

PBF-48 LINKAGE SUPPLEMENT

1. Remove the stock master-cylinder. Then, put the bolts back in and bolt the pedal back in
2. Slide the bracket into the frame- just behind the cross-member. Push it forward until it touches the cross member.

"LOOKING DOWN "

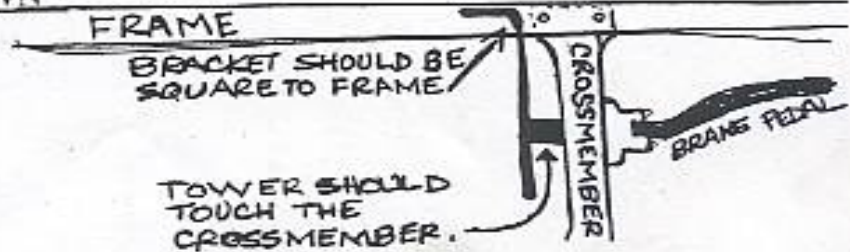

3. Drill two 7/16" holes in the frame and bolt the bracket in.
4. Top and bottom strut rods.

