




# NO LIMIT ENGINEERING

865-940-1503 • [www.NoLimit.net](http://www.NoLimit.net)  
1001 EPCO DRIVE • DANDRIDGE, TN 37725

## **PBF-48 LINKAGE SUPPLEMENT**

1. Remove the stock master-cylinder. Then, put the bolts back in and bolt the pedal back in
2. Slide the bracket into the frame- just behind the cross-member. Push it forward until it touches the cross member.

**"LOOKING DOWN "**

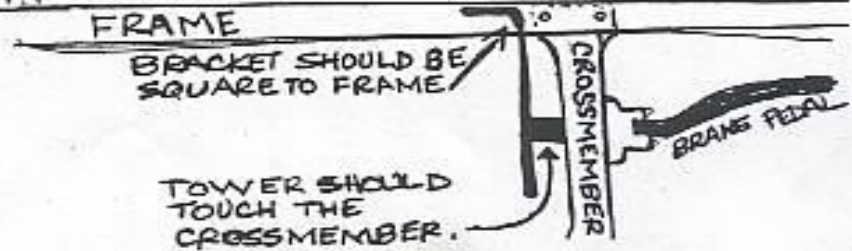

3. Drill two 7/16" holes in the frame and bolt the bracket in.
4. Top and bottom strut rods.

