




**NO LIMIT  
ENGINEERING**


865-940-1503 • www.NoLimit.net  
1001 EPCO DRIVE • DANDRIDGE, TN 37725

## **PBF-56 LINKAGE SUPPLEMENT**

This part is  $\frac{1}{4}$ " thick.  
It fits in the middle of the  
stock pedal "fork".  
The bolt supplied will  
fit through the lower hole.  
Two washers fit on each side  
to act as spacers.  
The linkage to the booster will  
now fit to the lower hole of the  
ratio adapter --  
using the bolt provided.

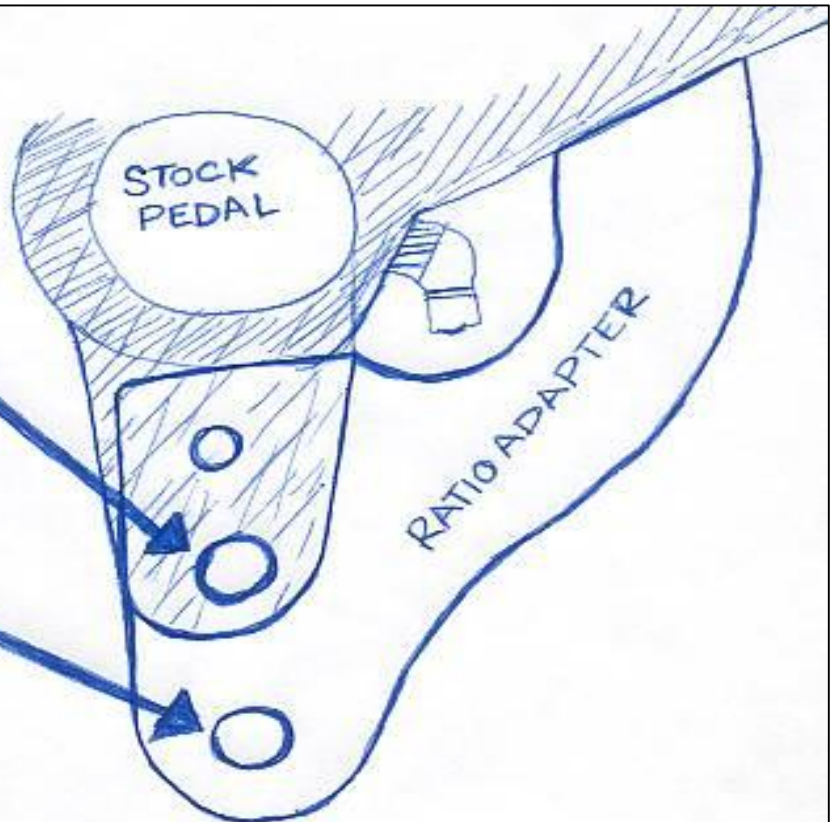

To make driving more comfortable, the pedal may be shortened at the top - max 2"

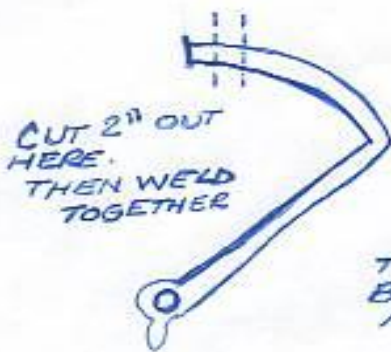

\* ALSO - IF THIS IS  
AN AUTO-TRANS,  
TURN THE  
PEDAL MOUNT  
OVER,



THIS GIVES MORE ROOM  
BETWEEN THE GAS AND BRAKE  
PEDALS.